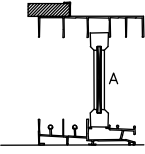
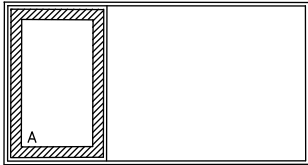
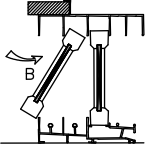
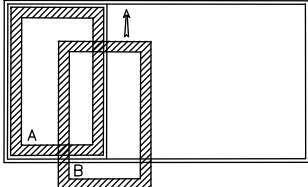
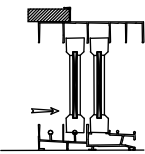
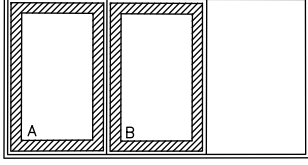
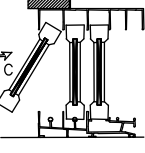
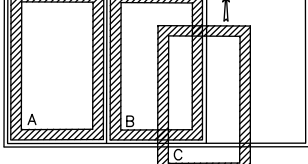
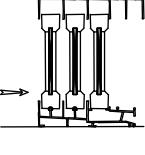
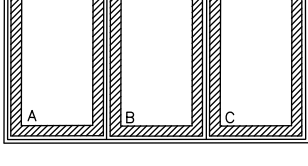

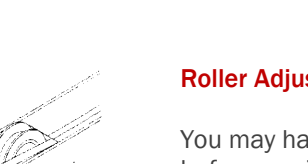
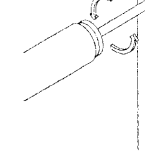
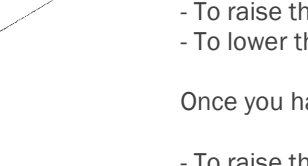


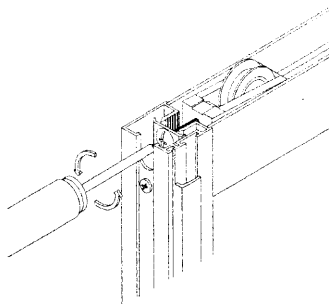


Entertainer Door Panel Installation

	<p>Detail 1</p> 	<p>Step 1</p>	<p>Fix the door frame into the studwork making sure it is square and plumb</p>
	<p>Detail 2</p> 	<p>Step 3</p>	<p>Remove bubble wrap from panel 'B'</p>
	<p>Detail 3</p> 	<p>Step 4</p>	<p>The panel needs to be inserted as per detail 2.</p>
	<p>Detail 4</p> 	<p>Step 5</p>	<p>Holding panel 'B' on an approximate 60° angle, insert the top into the second track and lift it up as high as possible</p>
	<p>Detail 5</p> 	<p>Step 6</p>	<p>Push the bottom of the panel across and lower into the track as per detail 3.</p>
	<p>Step 7</p> 	<p>Step 8</p>	<p>If you have trouble getting the panel in, remove and adjust the rollers as set out below</p>
	<p>Step 9</p> 	<p>Step 10</p>	<p>Once you have the panel in, adjust the rollers back up so it doesn't scrape on the sill</p>
	<p>Step 10</p> 	<p>Step 10</p>	<p>Adjust both panels and ensure they close plumb against each other and the jamb. The keeper for the lock as it is self adjusting.</p>

Panel 'A' – Fixed panel already installed in frame
 Panel 'B' – Panel with only rollers on the sill
 Panel 'C' – Panel with the handle on it
 (Large handle faces into the building)

Roller Adjustment



BOTTOM OF DOOR, UPENDED

You may have to adjust the height of the roller so it clears the bottom sill before you install the panel. Follow the steps below to do so:

- To raise the roller, adjust the screw anti-clockwise
- To lower the roller, adjust the screw clockwise

Once you have the panel installed:

- To raise the door, adjust the screw clockwise
- To lower the door, adjust the screw anti-clockwise